



**1.**

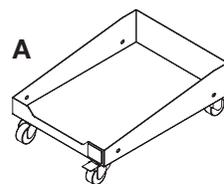


First, take base (A) and ensure brakes are applied to the two castors that have them. Braked castors are at opposite corners of base.

**2.**

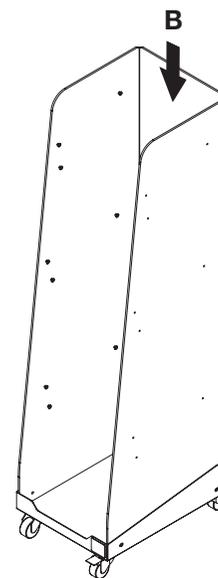


With the base locked in place, drop the body panel (B) into the base (A) as shown above.

**3.**

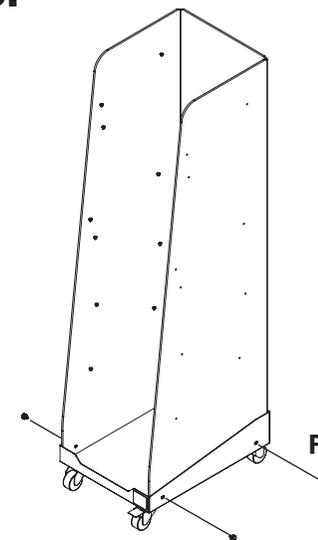


Next secure the body panel (B) in place with x4 thumb screws (F). Screw the fixings through holes in side of base and through body panel.

**4.**

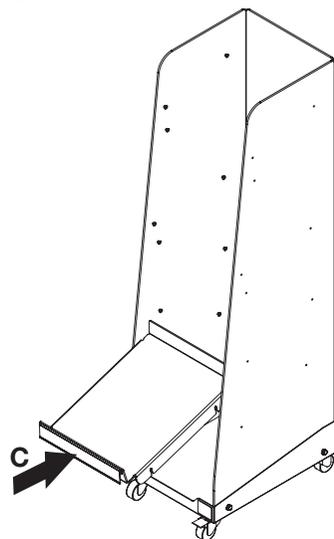


Next take the first of the confectionery shelves (C). Locate the slots on the sides of the shelf with the studs on the body panel (B).

**5.**

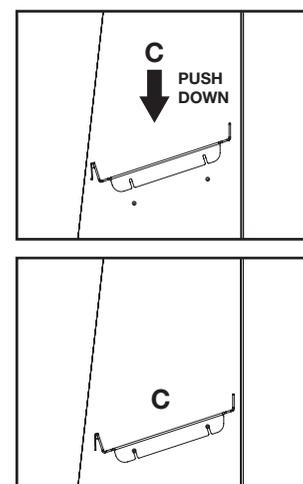


Guide the slots on the sides of the shelf onto the metal studs on the body (B). Push down until the shelf 'snaps' into place.

**6.**

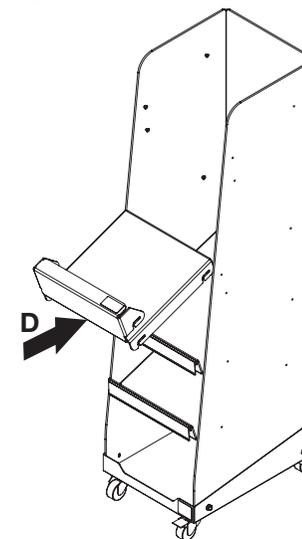


Repeat steps 4 and 5 for the second confectionery shelf (C). Next install the 100mm shelf (D) above the two confectionery shelves (C) as shown.

7.

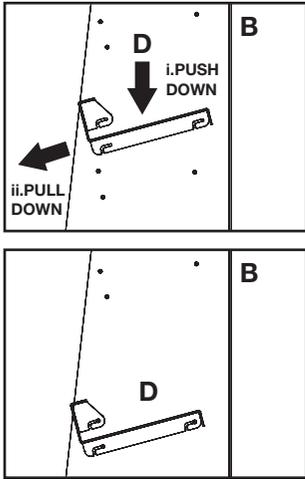


Guide the slots on the sides of the shelf (**D**) onto the metal studs on the body panel (**B**). Push down and pull towards the front until the shelf 'snaps' into place.

8.

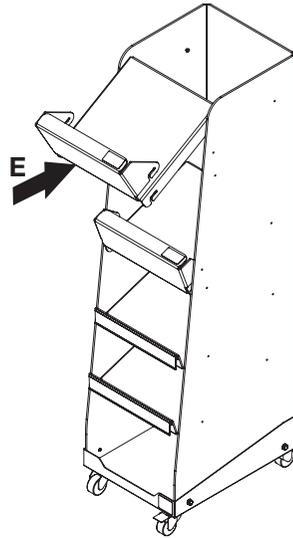

Finally install the 140mm shelf (**E**) onto the top set of metal studs on the body panel (**B**). See step 7 for fixing guide.

9.

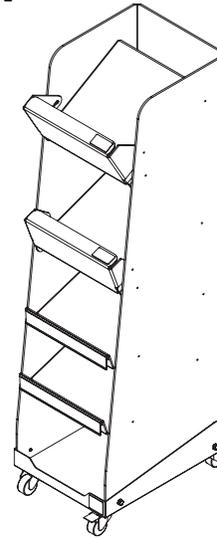

The assembly is now complete.

**Bartuf**<sup>®</sup>  
Quality Retail Solutions

Tel: 0113 244 5524 Fax: 0113 244 6664 email: sales@bartuf.com web: www.bartuf.com  
All dimensions are approximate and may be subject to change.  
All drawings and designs are protected by design right and copyright©  
Patents GB 2293538B.GB 2317328 US 6,112,912